 


PRODUCT NAME: UMBRELLA LIGHT WITH BLUETOOTH SPEAKER 8IN BLACK

ITEM NUMBER: LO467 BLK 8IN

DIMENSIONS OF ITEM ASSEMBLED: 7.87"DIA x 1.18" H

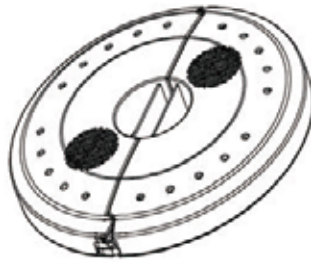

## IMPORTANT SAFETY INSTRUCTIONS:

- For your safety, please read instruction carefully and completely before beginning assembly or installation.
- Keep device and all components out of reach of children.
- Do not remove screws or open device.
- ONLY use under umbrella cover
- Do not expose to direct moisture
- Only use included DC-USB to charge device.
- Disconnect from charger when not in use.
- Do not place heavy objects upon or drop device.
- Do not use if device is cracked or broken.

## WARNING:

- The built-in rechargeable battery is not replaceable.
- Do not remove or replace battery.
- Do not dispose device in trash.
- Dispose of device at a Battery Recycling site after fully discharging battery.
- Please refer to local regulations for proper battery disposal.

## ENVIRONMENTAL PROTECTION:

---




The symbol on the product dictates that electrical products should not be disposed with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

## PARTS

---

Check to make sure you have the following:

INCLUDED:

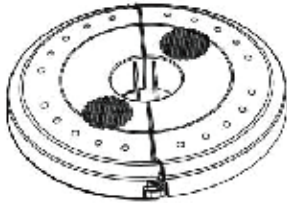

1- Light (A)



1- USB CORD (B)

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level surface.


**NOTE:** To avoid accidentally discarding small parts or hardware, retain all carton contents until after assembly and installation are complete.

Recommended Location for Use: Inside/Under Umbrella  
Fitting Umbrella Pole Diameter: 38-47mm

Charging Time: Approximately 5-6 Hours  
Running Time: Up to 4.5 Hours

## STEP 1: INSTALL CABLE AND CHARGE UNIT

- Connect USB cable to port in computer, or 5v output USB charging unit (C).
- Insert end of USB cable into DC jack of product. (B)
- Prior to use, charge the battery for 5-6 hours or until fully charged.
- Indicator light is red during charging period and goes off when battery is fully charged.

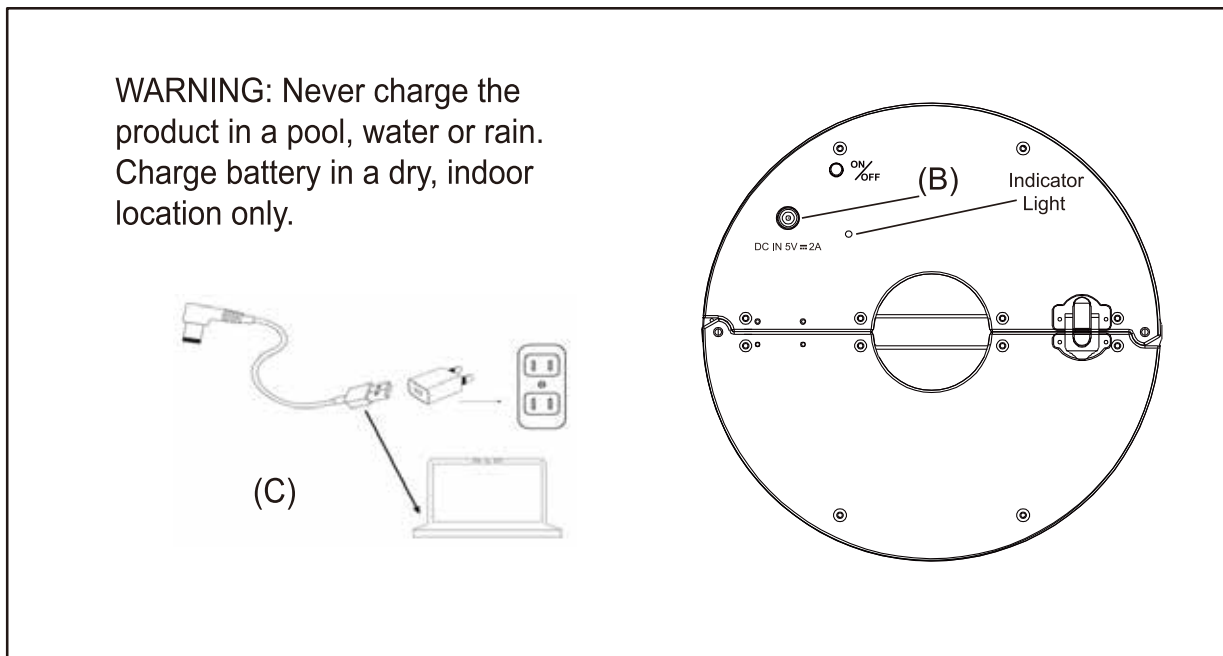

## STEP 2: POWER ON

To turn on Light (A), press the on/off button once. There will be an audible tone and the LED indicator light will illuminate green. To turn the Light off, press on/off again.

## STEP 3: INSTALL ONTO UMBRELLA POLE

Open buckle on back of product, place around umbrella pole at desired height position and close buckle.

## STEP 4: BLUETOOTH CONNECTION

- Power ON the Umbrella Light to hear audible tone.
- Turn on Bluetooth on your mobile device and in Pairing Mode, select “speakerlighting” from the Bluetooth list. Another audible beep will sound once your device is connected.
- Select song or adjust volume via your mobile device.
- Maximum distance between mobile and product: Approximately 30 feet.
- To disconnect, turn off product directly or turn off Bluetooth Mode Button on your mobile device. An audible deactivation beep will sound indicating the device has been disconnected.

## FCC INSTRUCTION:

---

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Cleaning & Care:

Always TURN OFF light after use.  
Use dry with a clean, soft cloth to clean.  
Read and follow ALL Warning and Safety Instructions.

Retain Instructions for future reference.