


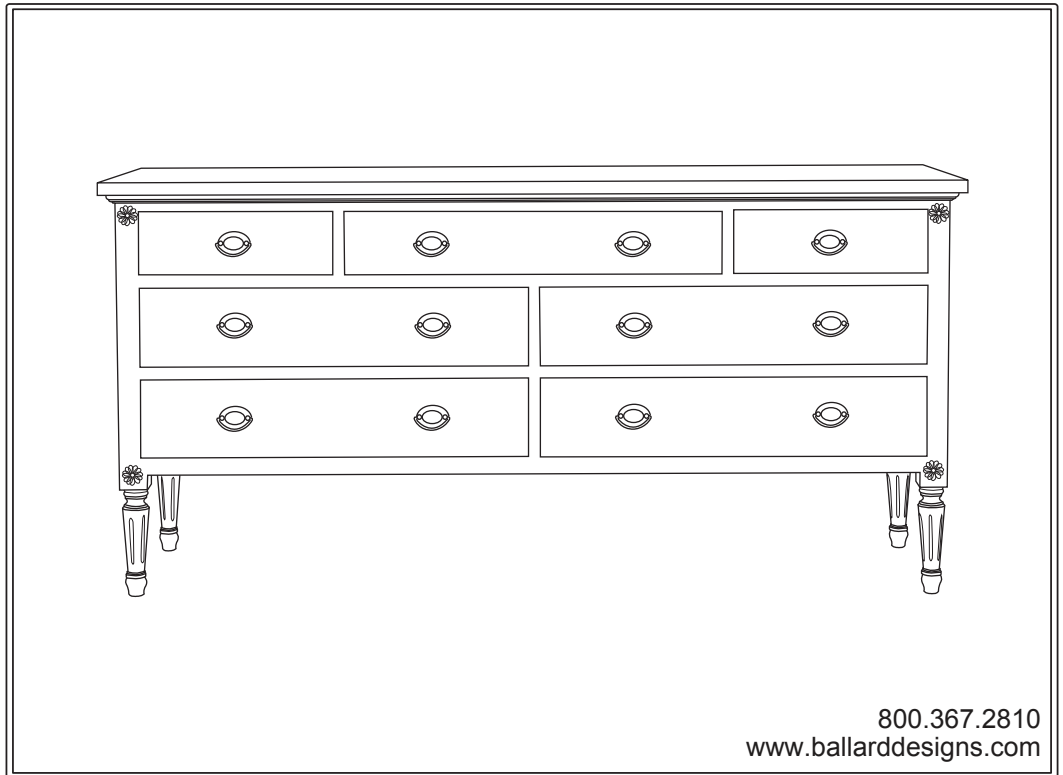

PRODUCT NAME: Louis XVI Double Dresser
 ITEM NUMBER: MC041
 DIMENSIONS OF ITEM ASSEMBLED:
 34"H x 68"W x 21"D


For Assembly Purposes:


- Requires 2 or more people.
- Legs inside of a drawer.
- Be careful of legs.
- Requires a screwdriver.



800.367.2810
www.ballarddesigns.com


Check to ensure that you have the following:

Ltr.	Qty.	Hardware Included
A	2	 Anti Tip Kits


Ltr.	Qty.	Part List
B	4	 Legs (Located inside of drawer)

STEP 1: Leg Assembly


Lay on back to attach all four Legs (B).
When setting the Dresser upright,
DO NOT put pressure on the legs.

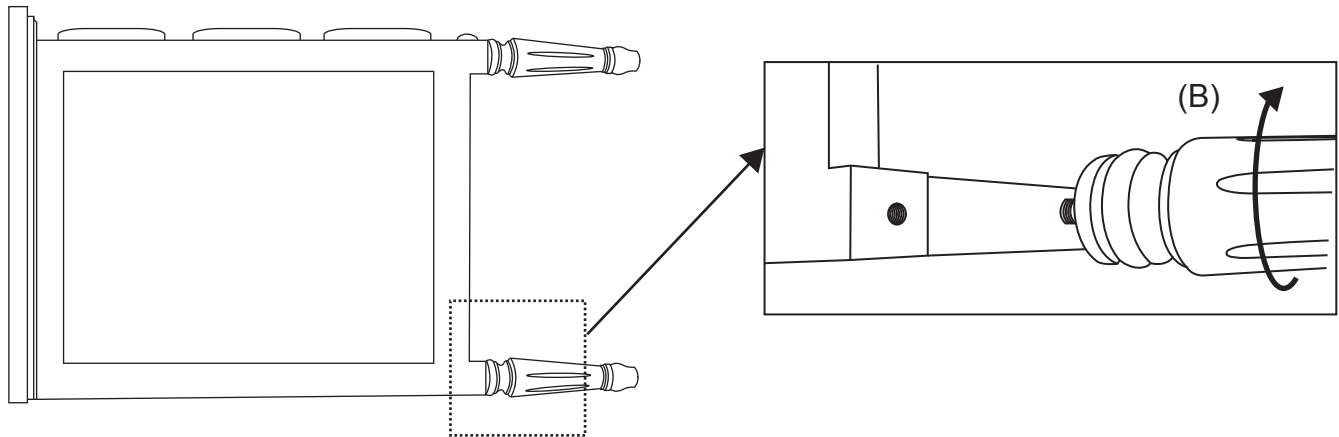

STEP 2: Anti Tip Installation

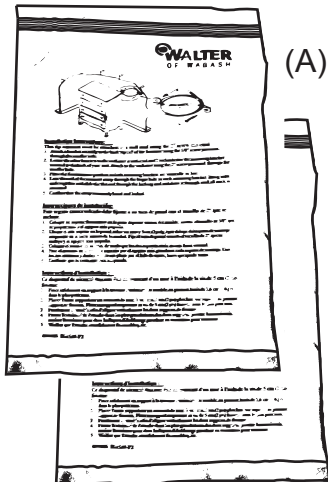

Install Anti Tip Here

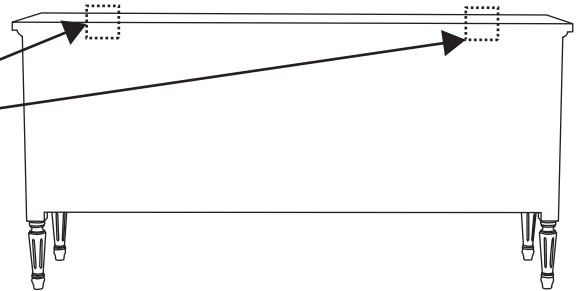

Check to Make Sure Bag Contains All
Necessary Parts.

1. Attach bracket to back of furniture with 5/8" screw through smaller bracket hole.
2. Screw in other bracket, with 2" screw through smaller hole, over a stud and 2" below the bracket attached to the furniture.
3. Position furniture so brackets vertically align.
4. Lace restraint through larger bracket holes and lock into place with no available slack.
5. Confirm strap is securely laced and locked.

Cleaning & Care:

DO NOT use alcohol based products or spray polisher as they can damage the finish.
Dust with soft cloth. One to two times monthly apply beeswax polish as needed.
Finish can be affected by heat or extended contact with oils or wine.