










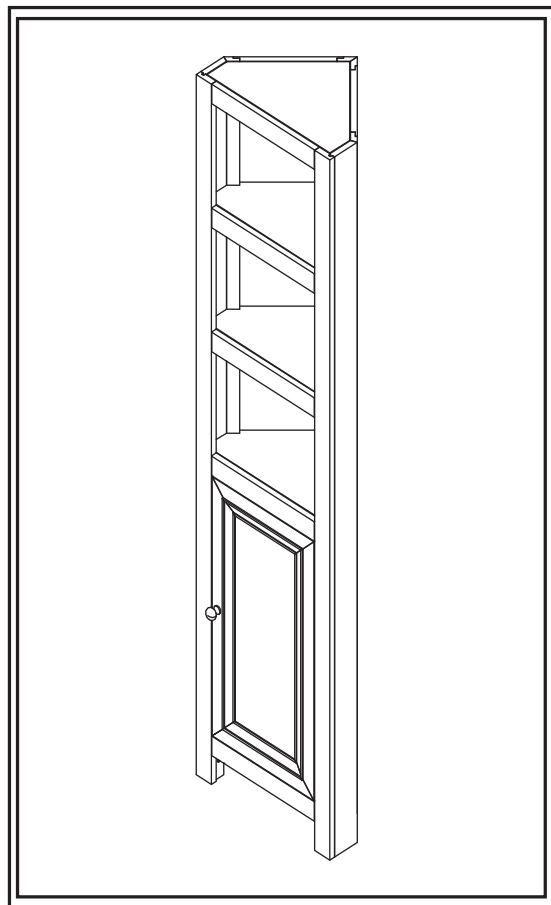



PRODUCT NAME: Rena Corner Cabinet
ITEM NUMBER: MF037
ASSEMBLED DIMENSIONS : 72.5"H x 17.75"W x 12.5"D



REQUIRED TOOLS:
Phillips Screwdriver, Small
Hammer, Drill, Pencil

Ltr.	Qty.	Hardware Included	
A	6		*Lock Washers
B	6		*Flat Washers
C	4		*Small Screws
D	2		*Large Screws
E	2		*Expansion Bolts w/small washer
F	2		*Wall Brackets (F)
G	1		**Magnetic Catch (Optional - to reverse door swing. Page 4)
H	3		Shelf Supports w/small screws (Installed inside Cabinet)



*Part of WALL ANCHORING / ANTI-TIP HARDWARE KIT.

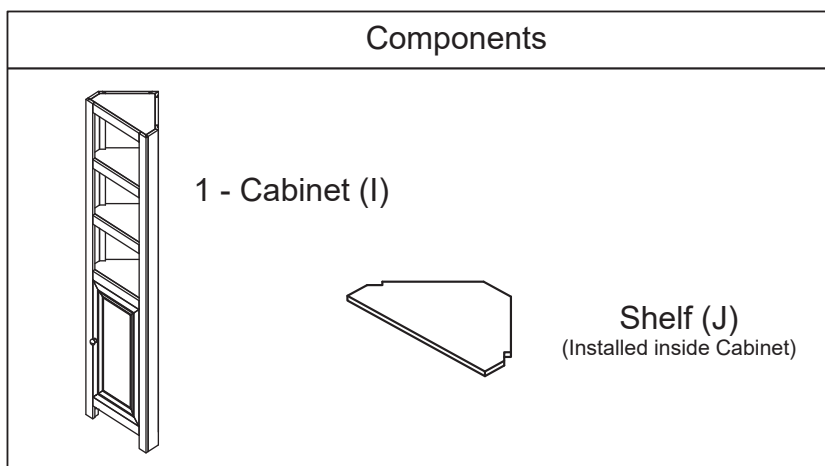

⚠ Assemble in location for intended use.

STEP 1: LEVEL CABINET. Place Cabinet (I) into location for use and adjust pre-installed Rotary Levelers as necessary. Lift applicable corner and turn Leveler clockwise/counterclockwise to adjust.


STEP 2: ADJUSTABLE SHELF Shelf is pre-installed. To adjust, remove small set screws from each Support (H) with a Phillips Screwdriver. Remove Shelf (J). Reposition Supports. Replace Shelf.

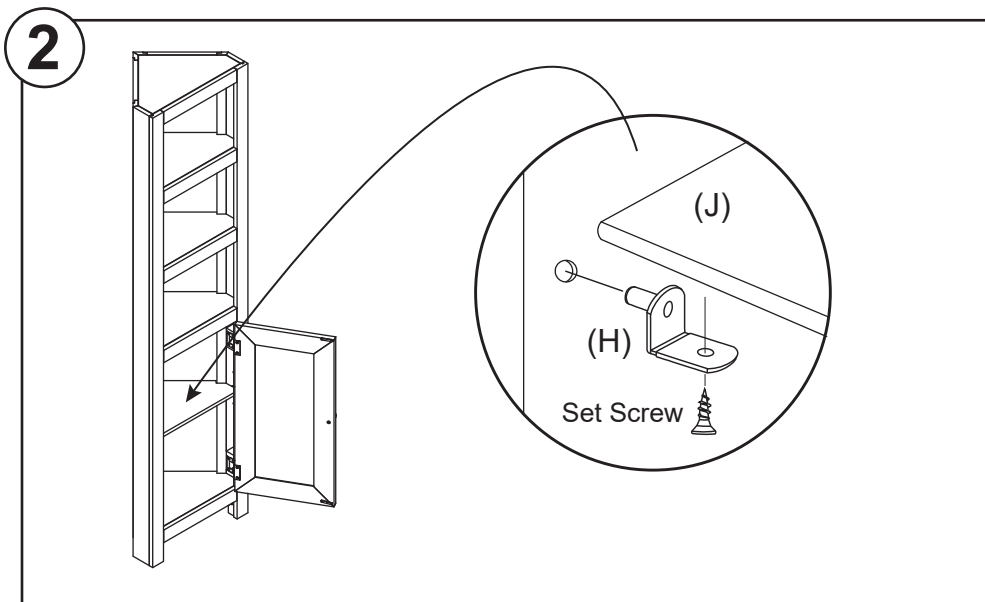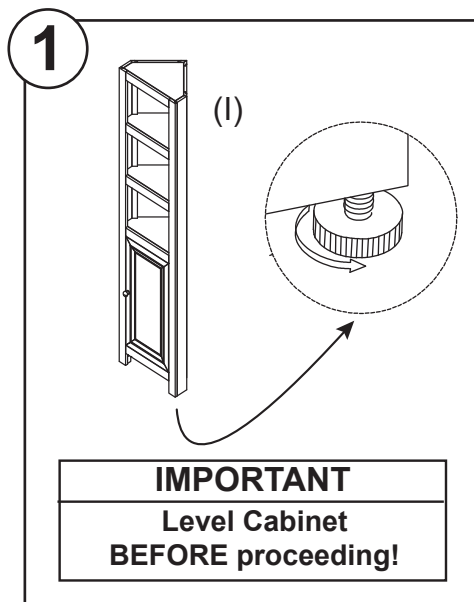

⚠ STEPS 3 through 5 cover WALL ANCHORING / ANTI-TIP hardware installation. Protect yourself, your property, and others. Securely anchor unit to wall studs or *Expansion Bolts.



STEP 3: Determine installation location, then identify two *wall studs behind unit. Push unit into place then slide each Wall Bracket (F) over top of unit and center in front of each *wall stud. Use pencil to mark wall at top of each Bracket.

IMPORTANT: Orient Brackets as illustrated to ensure they are not visible after installation.

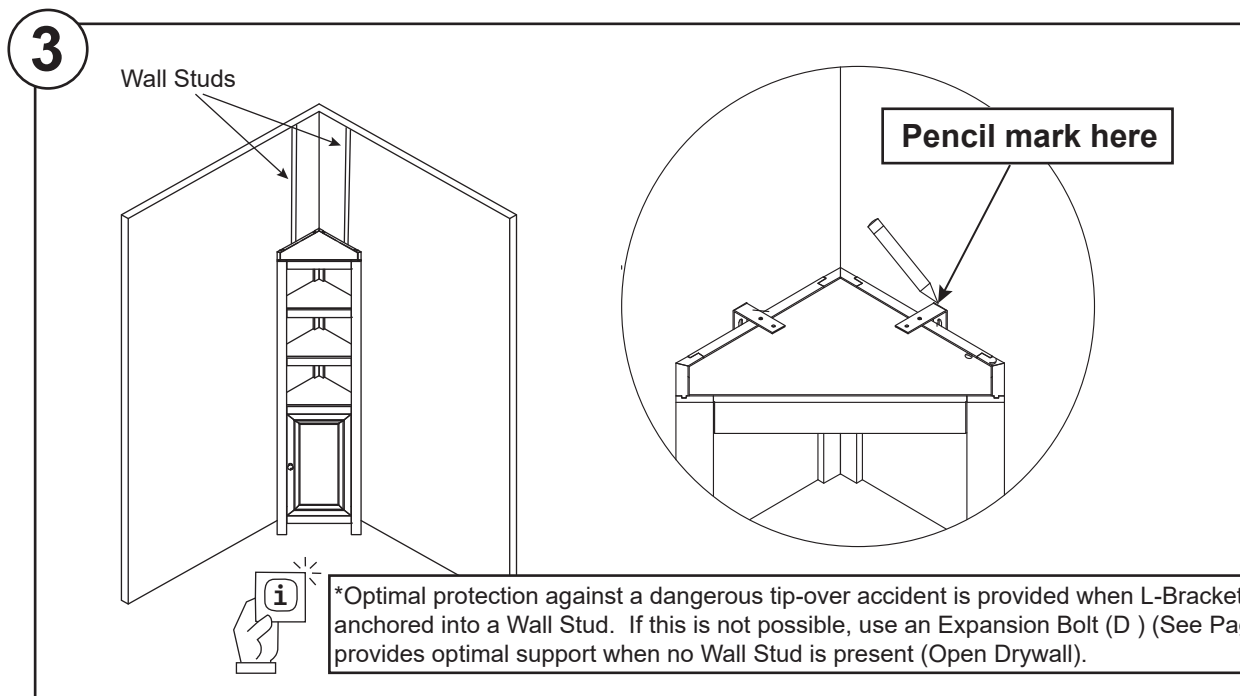


Customer Service: 800-367-2810
Online: www.ballarddesigns.com



STEP 4: Pull unit away from wall, align Wall Brackets (F) with marks on wall then anchor Bracket directly into wall stud using Screw(C). **NO STUD: USE EXPANSION BOLT. FIG. 1**

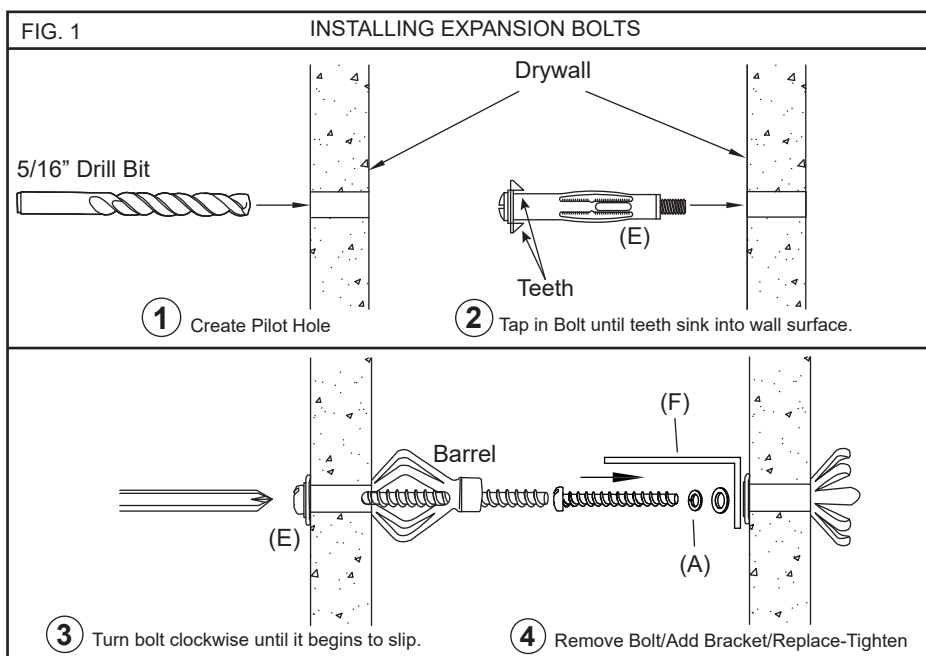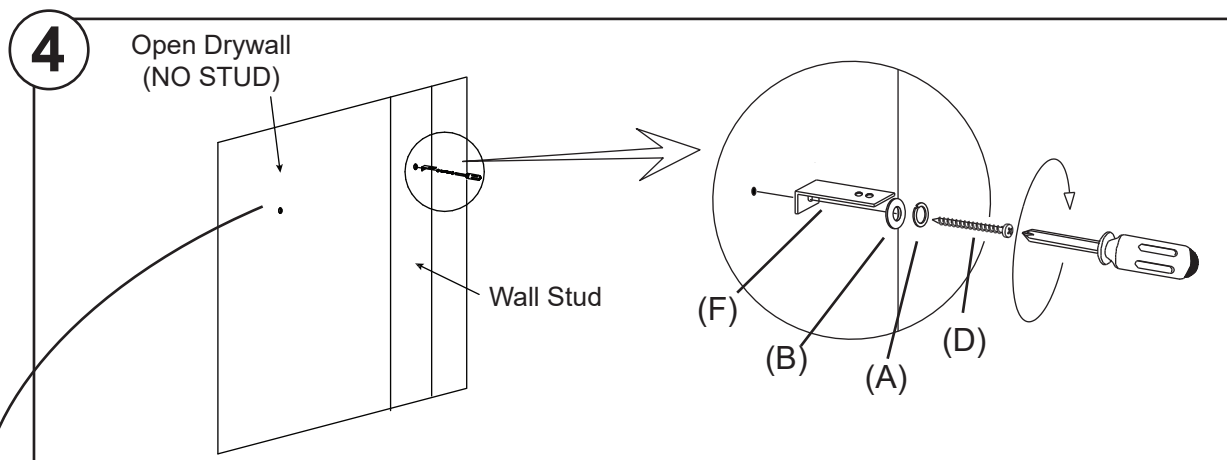

STEP 5: Move unit back into place and slide under both Brackets (F). Attach using Small Screws (C). Tighten using a screwdriver.

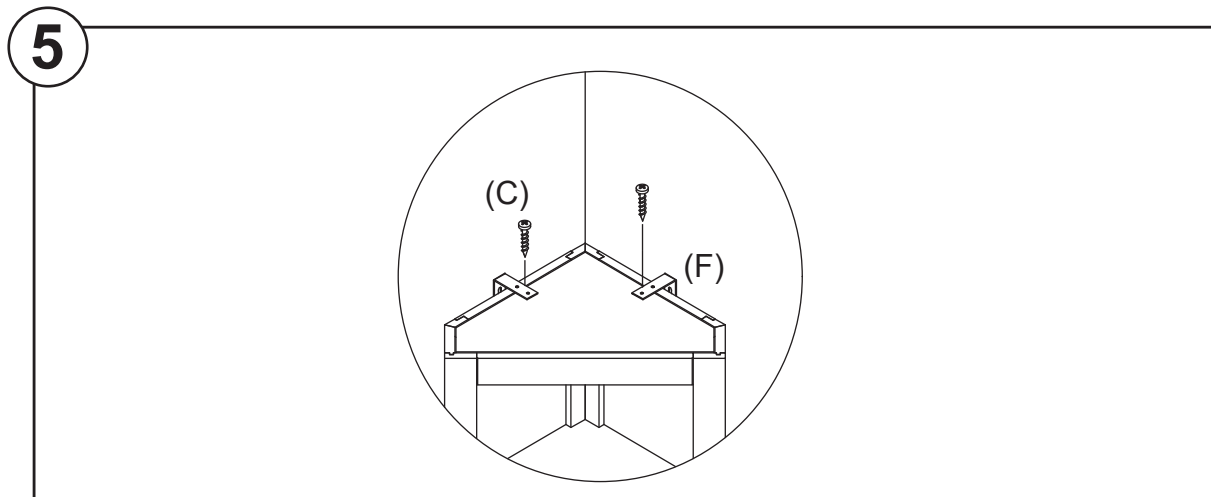

REVERSIBLE DOOR

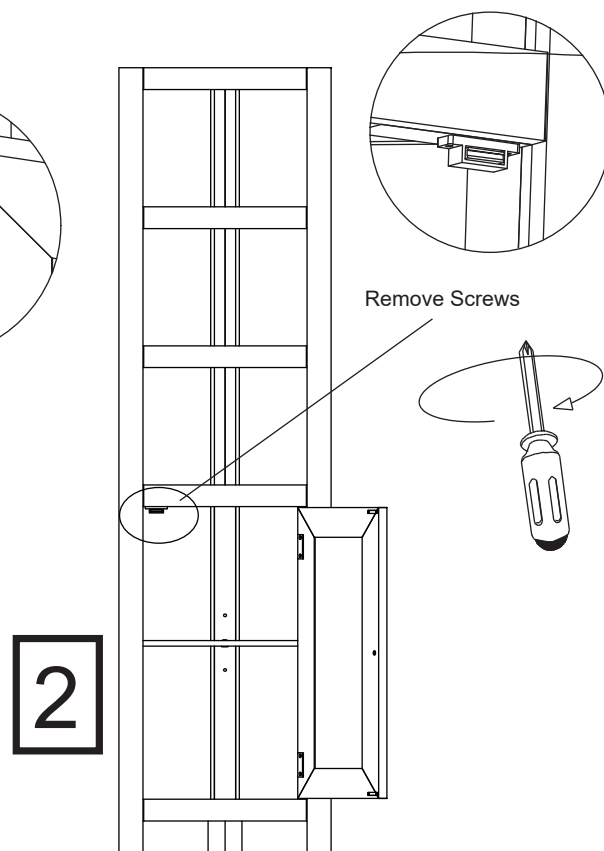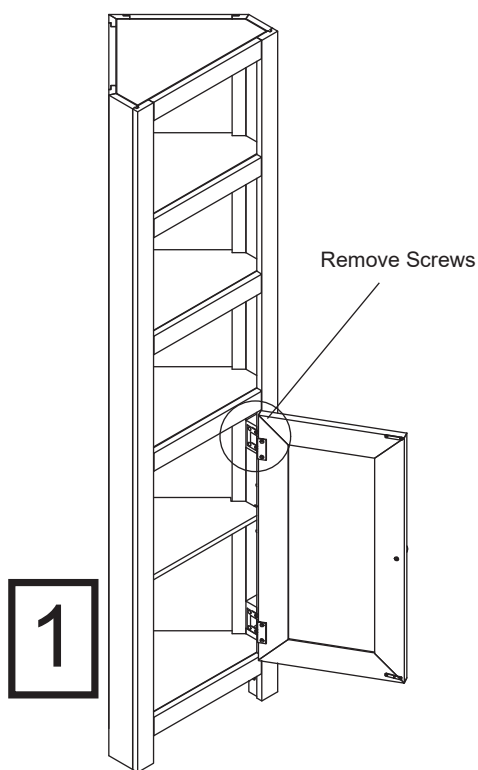

PROCESS:

1. Remove screws from each hinge.
2. Flip door to opposite side.
3. Replace hinge screws.
4. Remove screws from magnetic catch.
(**or use additional Catch (G))
5. Move catch to opposite side.
6. Replace screws.

