


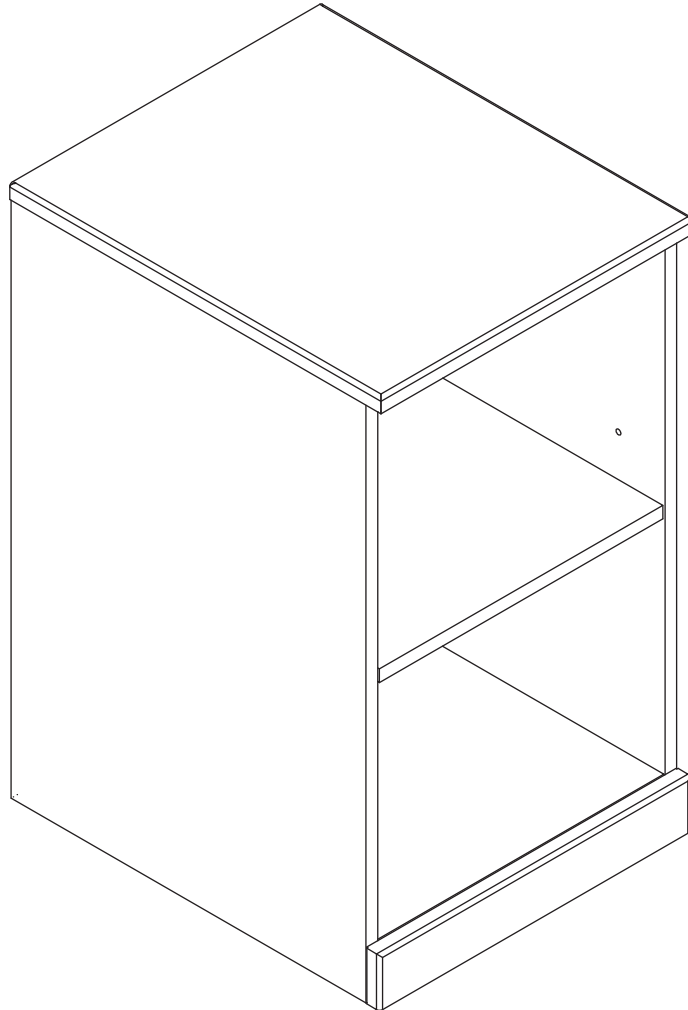

PRODUCT NAME: Original Home Office™ 1 Shelf Open Cabinet


ITEM NUMBER: MO253

ASSEMBLED DIMENSIONS : 27"H x 16"W x 19"D



Prevent accidentally discarding small parts or hardware. Retain all carton contents until assembly and installation are complete.


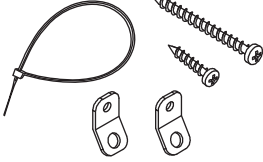
⚠ Assemble in location for intended use.

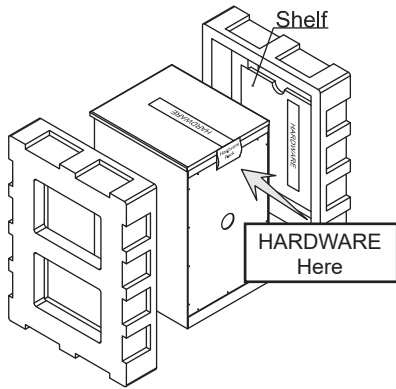



REQUIRED TOOLS:
Phillips Screwdriver

-Two person assembly suggested.

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.


Ltr.	Qty.	Hardware Included
A	4	 Shelf Supports
B	1	 Wall Anchoring Anti-Tip Kit See Page 3

WARNING
Tip-Over Hazard
Prevent tipping accidents. Anchor your furniture.
ANCHORING HARDWARE INCLUDED

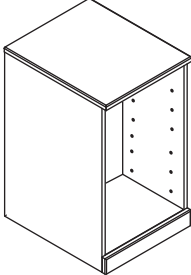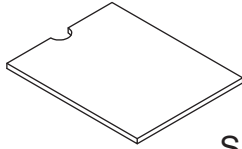
Ltr.	Qty.	Components
C	1	 Cabinet (C)
D	1	 Shelf (D)

INSTALL SHELF
Determine placement for Shelf (D) then insert Shelf Supports (A) into corresponding pre-drilled holes.

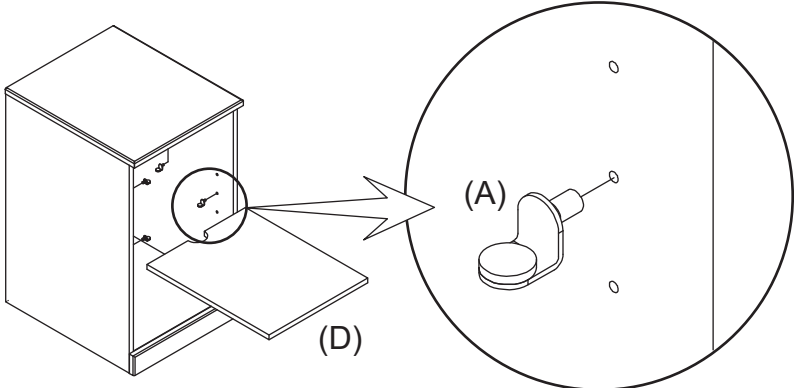



Lay Shelf level upon supports.



Cleaning and Care
Periodically dust with a soft, dry cloth.
Prevent finish damage: do not use alcohol based cleaners or polishers.




WALL ANCHORING HARDWARE (ANTI-TIP)

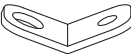Ltr.	Qty.	Hardware Included
A	1	 Large Screw
B	1	 Small Screw
C	2	 Bracket
D	1	 Retention Belt



Installation:

1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screw (B).
3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screw (A) 2 inches below Bracket attached to back of unit.
4. Move unit into place, align Brackets then connect both using Retention Belt (D).
5. Confirm Belt is securely laced and locked.

