


PRODUCT NAME: Hutton Wide Open Cabinet Base
ITEM NUMBER: MO562 OWD
ASSEMBLED DIMENSIONS : 29.75"H x 47.5"W x 20"D

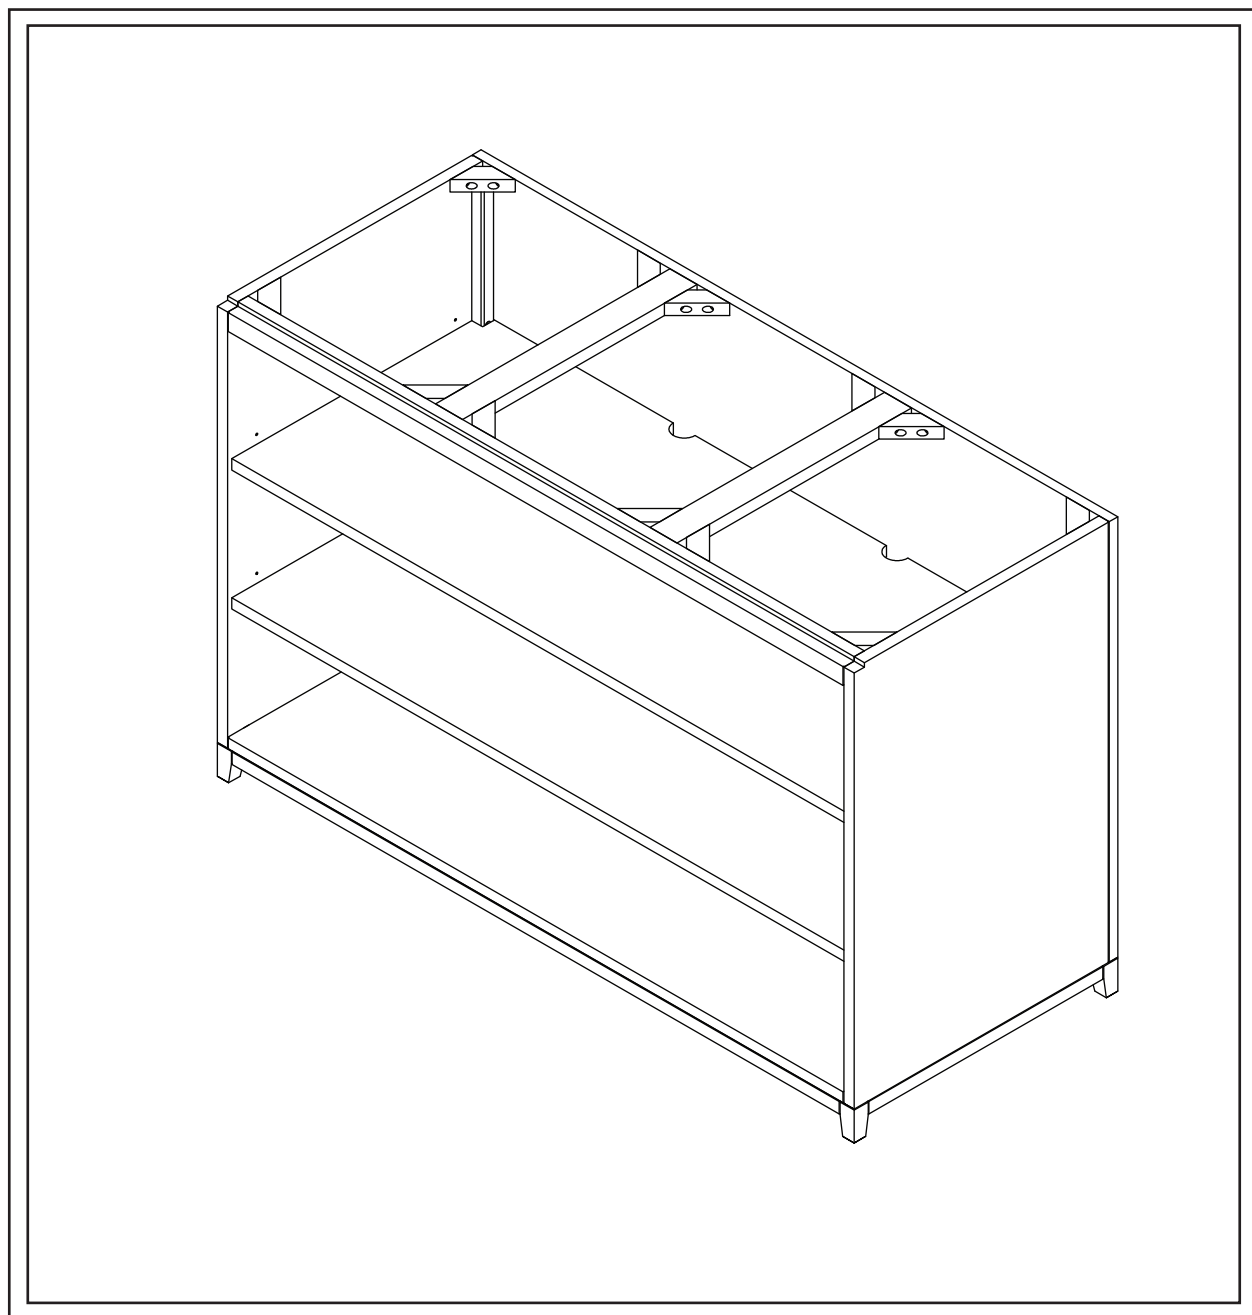

! Assemble in location for intended use.



REQUIRED TOOLS:

Phillips Screwdriver


-Two person assembly suggested.

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.

NOTE: To avoid accidentally discarding small parts or hardware, retain all carton contents until assembly and installation are complete.

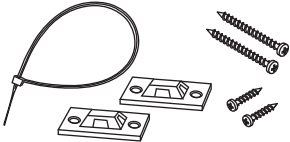Ltr.	Qty.	Hardware Included
A	8	 Shelf Supports
B	2	 Wall Anchoring (Anti-Tip) Kits See page 4


WARNING
Tip-Over Hazard
Prevent tipping accidents. Anchor your furniture.
ANCHORING HARDWARE INCLUDED

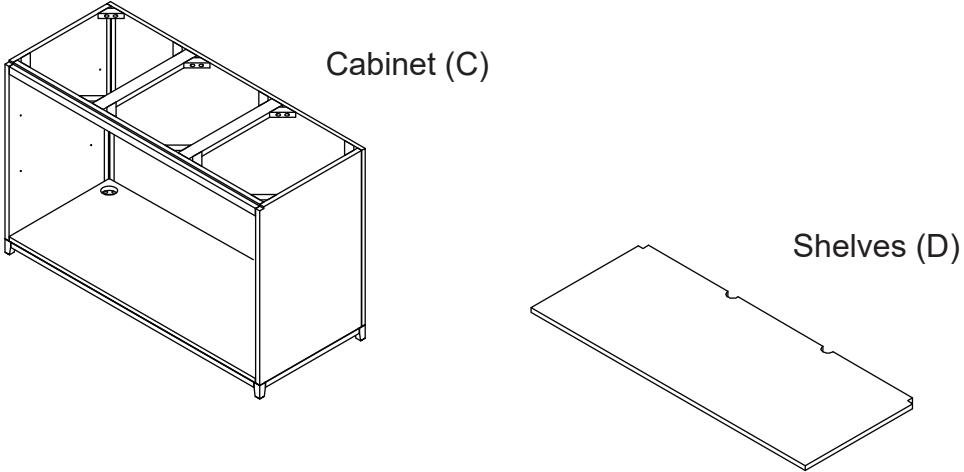Ltr.	Qty.	Components
C	1	 <div>Cabinet (C)</div> <div>Shelves (D)</div>
D	2	


NOTICE

This Hutton Cabinet Base is designed for use with Hutton Work Surface Units which are sold separately.

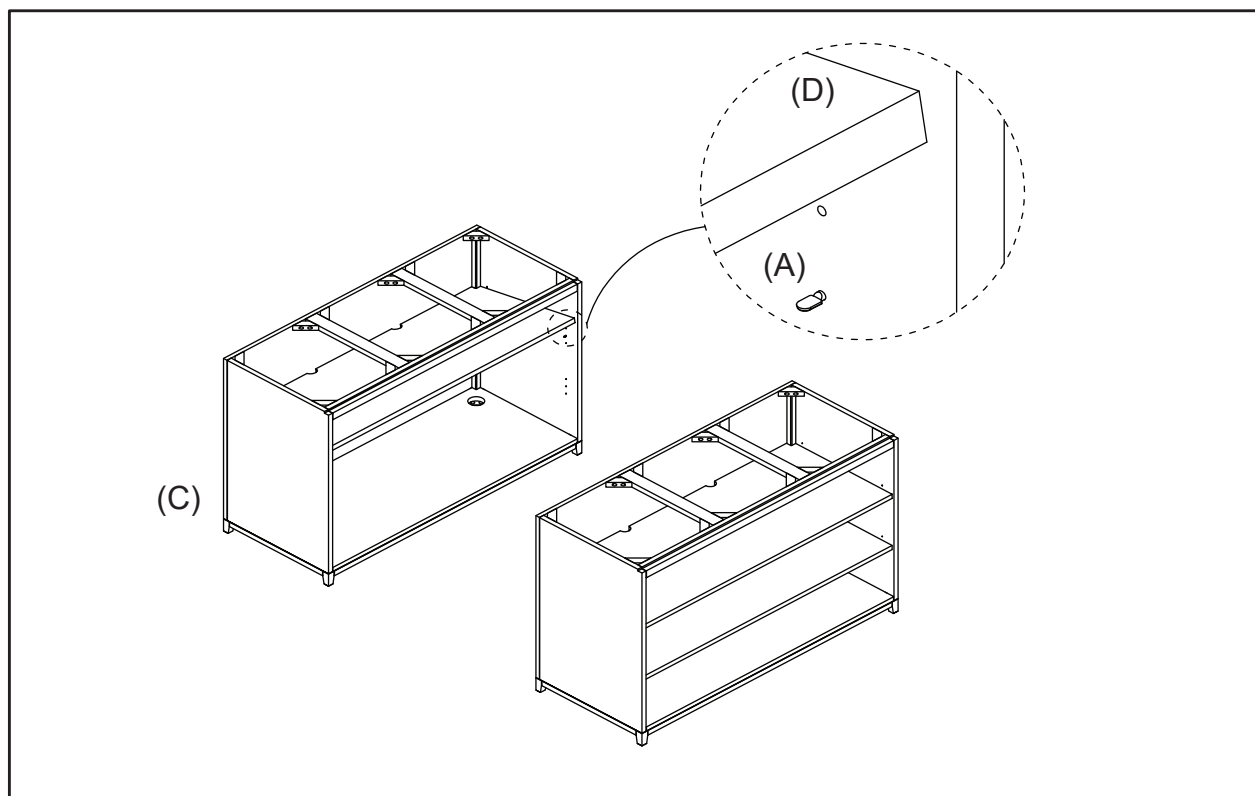



STEP 1: Determine location for each Shelf (D) then insert Shelf Supports (A) into corresponding pre-drilled holes. Lay each Shelf level upon Supprts.

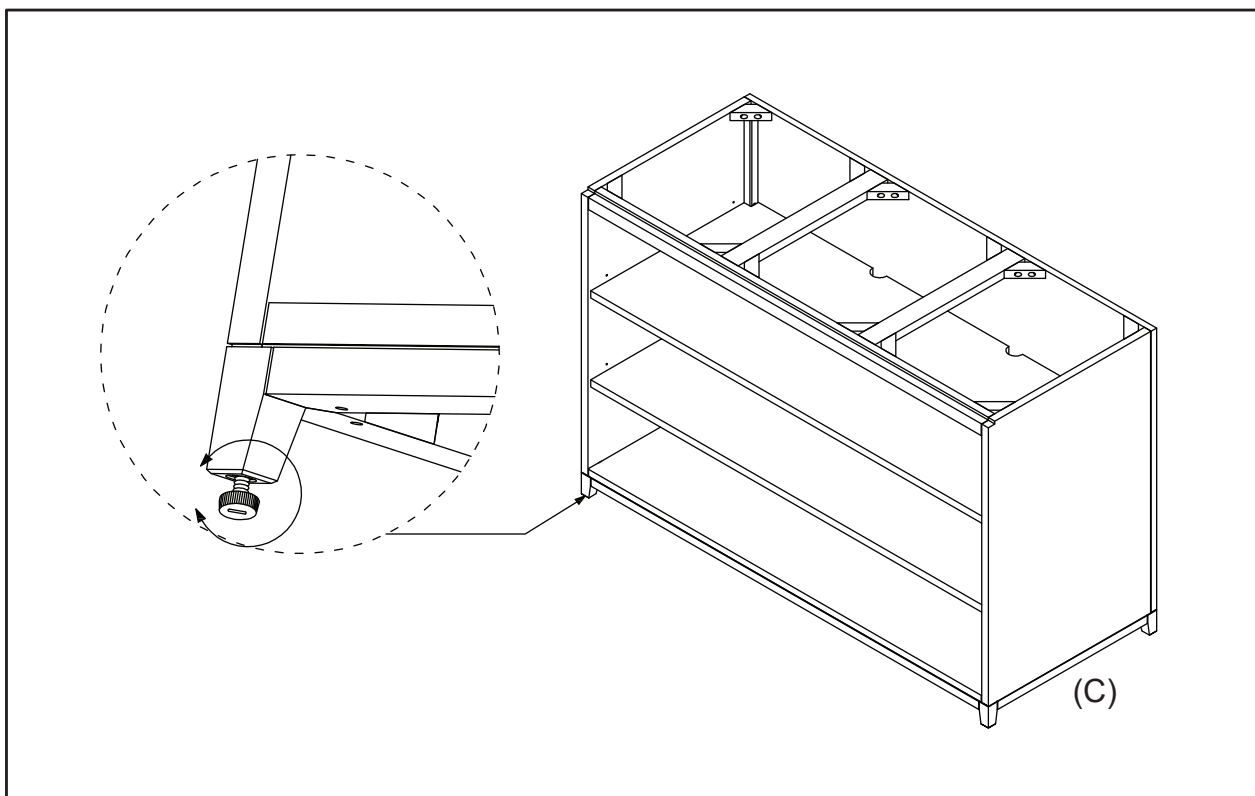

STEP 2: Cabinet (C) is equipped with Rotary Levelers located under each corner. If necessary, Cabinet may be adjusted by carefully lifting applicable corner and turning Leveler clockwise/counterclockwise.




WALL ANCHORING HARDWARE (ANTI-TIP)

Ltr.	Qty.	Hardware Included	
A	2		Small Screw
B	2		Large Screw
C	2		Bracket
D	1		Retention Belt



ATTENTION: Do not anchor Cabinet Bases to wall onto which a Hutch is to be installed.
Hutches will be anchored to wall after attachment to Cabinet Bases.

1. Place Cabinet against wall at desired location then locate and mark a Wall Stud behind unit.
 2. Corresponding to Stud location, attach one Bracket (C) into WOOD BANDING on back of Cabinet using Small Screws (A). If Screw is not driven into wood it may pull out during a tip-over.
- *NOTE: Place Work Surface Top onto Cabinet BEFORE installing bracket onto Cabinet back.
3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screws (B) 2 inches below Bracket attached to back of unit.
 4. Move unit into place, align Brackets then connect both using Retention Belt (D).
 5. Confirm Belt is securely laced and locked.

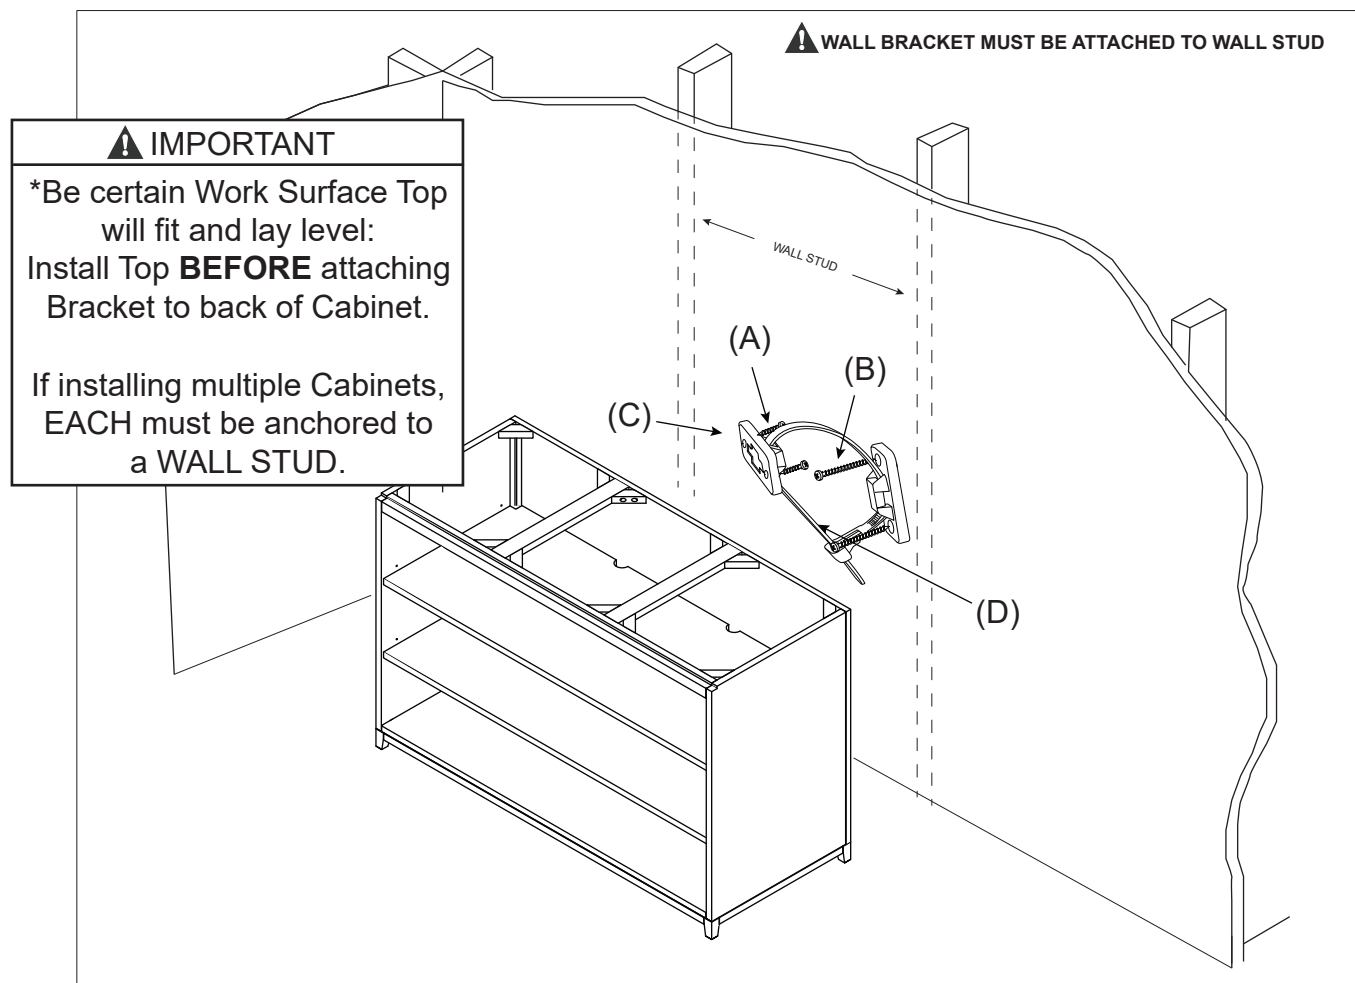

Cleaning & Care:

DO NOT use alcohol based products or spray polisher as they can damage the finish. Dust with soft cloth.