



PRODUCT NAME: Vivi Writing Desk


ITEM NUMBER: MO662


ASSEMBLED DIMENSIONS : 33"H x 58"W x 26.25"D

REQUIRED TOOLS:

Phillips Screwdriver



-Two person installation suggested.

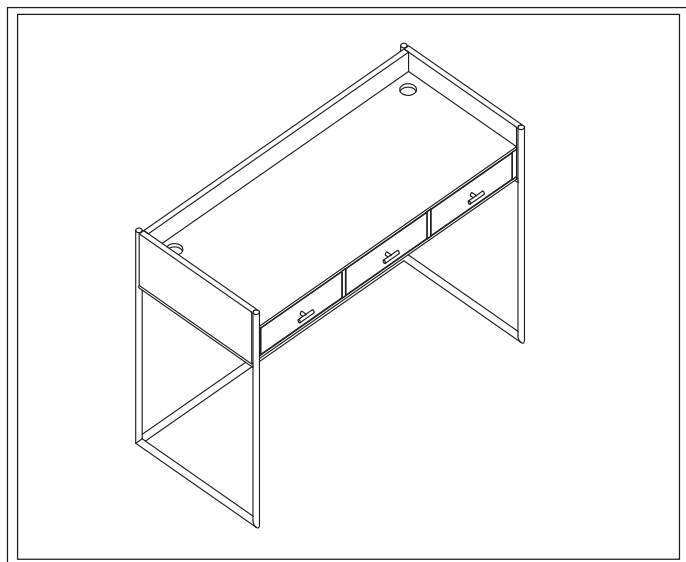

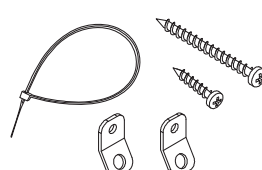Qty.	Hardware Included
2	 <p>Wall Anchoring (Anti-tip) Kit See page 2</p>



LEVELERS: Desk is equipped with Rotary Levelers installed under each leg. If necessary, adjustments may be made by carefully lifting applicable corner and turning Levelers clockwise/counterclockwise.

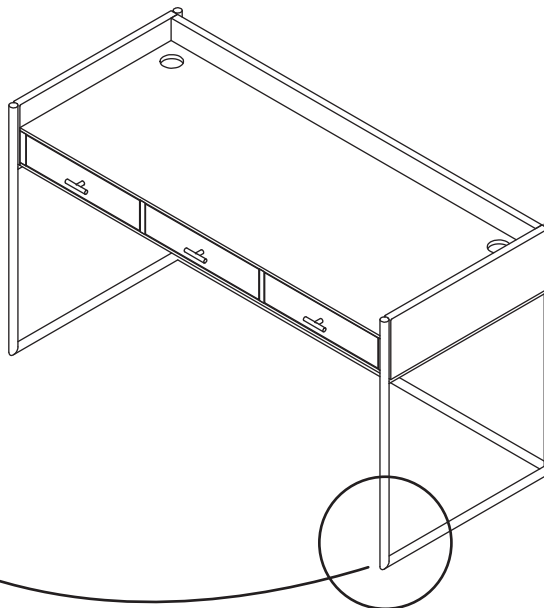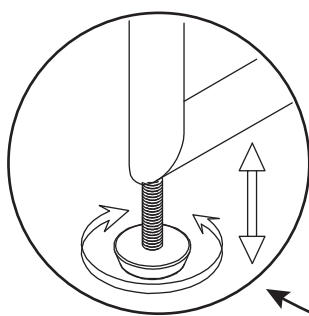

Cleaning and Care

Periodically dust with a soft, dry cloth.
Prevent finish damage: do not use alcohol based cleaners or polishers. Promptly remove spills.





PRODUCTS ARE NOT INTENDED
FOR COMMERCIAL USE.

UPDATED: 3-22-2023

MADE IN VIETNAM

Page 1 of 2

WALL ANCHORING HARDWARE (ANTI-TIP)

Ltr.	Qty.	Hardware Included	
A	2		Large Screw
B	2		Small Screw
C	4		Bracket
D	2		Retention Belt



WARNING

Tip-Over Hazard

Serious or fatal crushing injuries can occur from a furniture tip-over
Prevent tipping accidents. Anchor your furniture.

Installation:

- 1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
- 2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screw (B).
- 3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screw (A) 2 inches below Bracket attached to back of unit.
- 4. Move unit into place, align Brackets then connect both using Retention Belt (D).
- 5. Confirm Belt is securely laced and locked.

