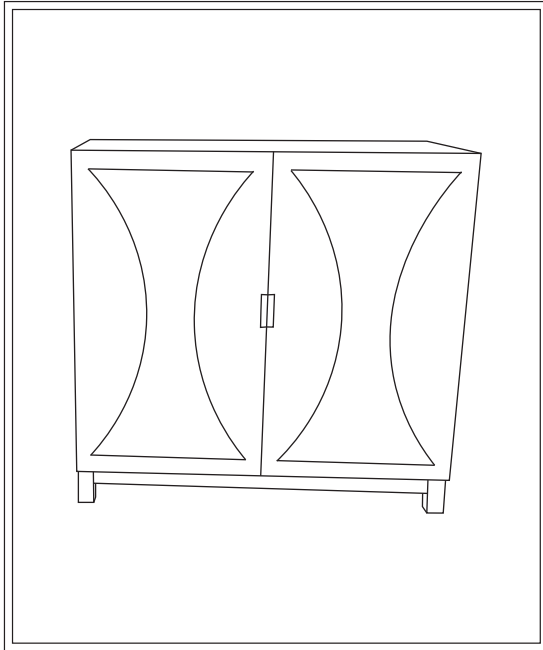








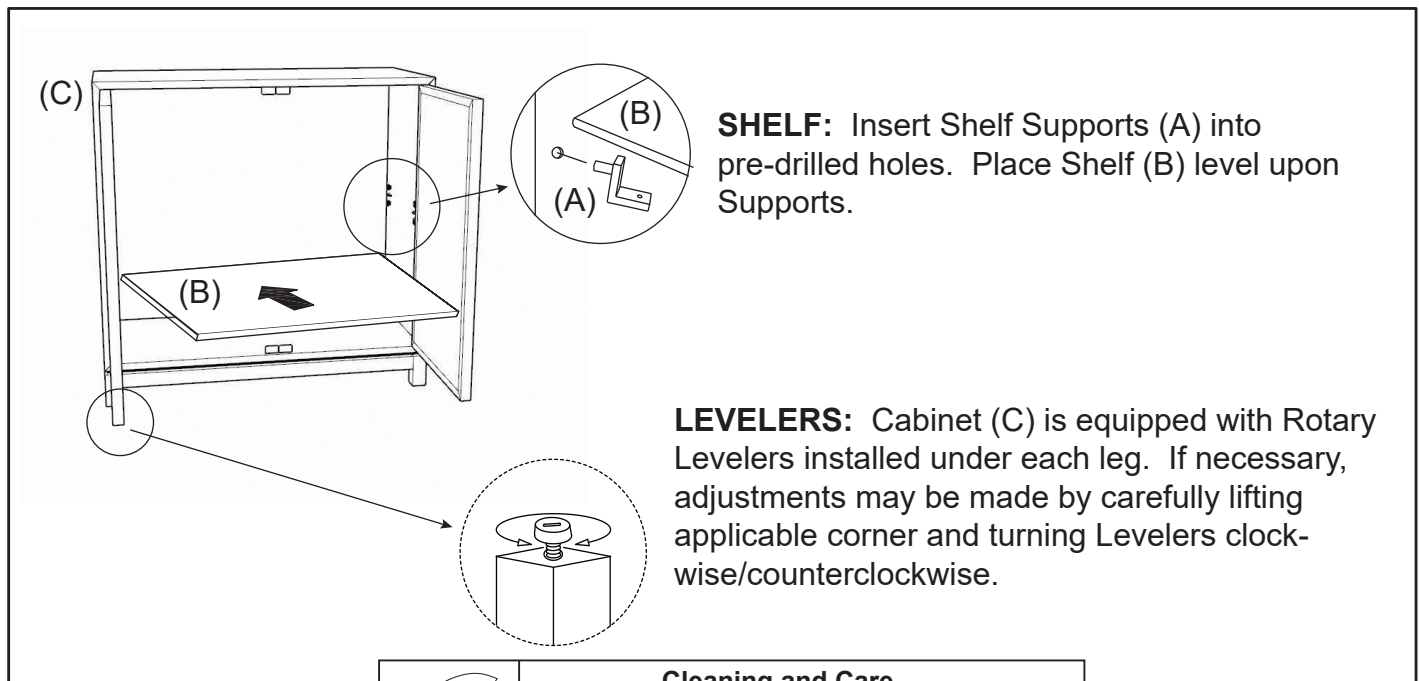
PRODUCT NAME: Walden Cabinet
ITEM NUMBER: MS143
ASSEMBLED DIMENSIONS : 34"H x 34"W x 16"D




REQUIRED TOOLS:
Phillips Screwdriver
-Two person assembly suggested.







Ltr.	Qty.	Hardware/Components Included	
A	4		Shelf Supports
B	1	Shelf (B)	 Cabinet (C)
C	1		
D	2		Wall Anchoring (Anti-tip) Kit See page 2





Cleaning and Care
Periodically dust with a soft, dry cloth.
Prevent finish damage: do not use alcohol based cleaners or polishers. Promptly remove spills.

WALL ANCHORING HARDWARE (ANTI-TIP)

Ltr.	Qty.	Hardware Included	
A	4		Small Screw
B	4		Large Screw
C	4		Bracket
D	2		Retention Belt



1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screws (A).
3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screws (B) 2 inches below Bracket attached to back of unit.
4. Move unit into place, align Brackets then connect both using Retention Belt (D).
5. Confirm Belt is securely laced and locked.

