









PRODUCT NAME: Abbeville Double Door Cabinet
ITEM NUMBER: MV240
ASSEMBLED DIMENSIONS : 23 7/8"H x 24"W x 15 7/8"D

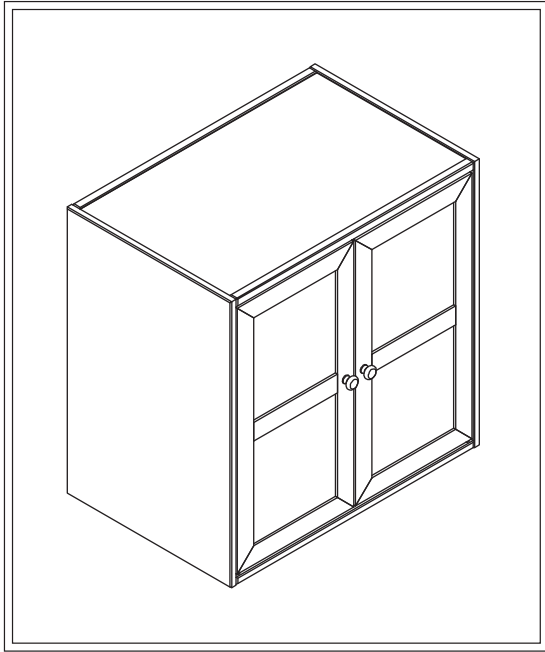


REQUIRED TOOLS: Phillips Screwdriver

ASSEMBLY TIME: 5 - 10 minutes

Ltr.	Qty.	Hardware & Components Included	
A	4		Shelf Supports
B	1		Shelf
C	4		Adhesive Pads
D	2		Connector Plates with 2 Screws (Pre-installed on back of Cabinet)
E	2		Wall Anchoring (Anti-tip) Kits* See Page 3


*When stacking 3 OR MORE cabinets unit **MUST** be anchored to a **WALL STUD**.

- 1** Remove packaging. Hardware Packet attached as illustrated. Shelf on top.

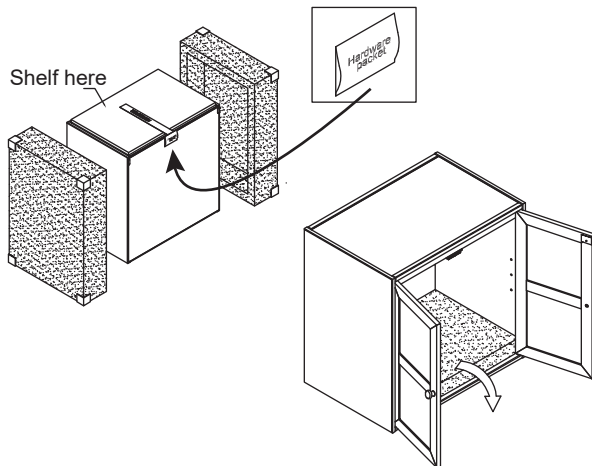

- 2** Remove styrofoam panel from inside compartment.

- 3** Attach Adhesive Pads (C) to each corner on underside of Cabinet.

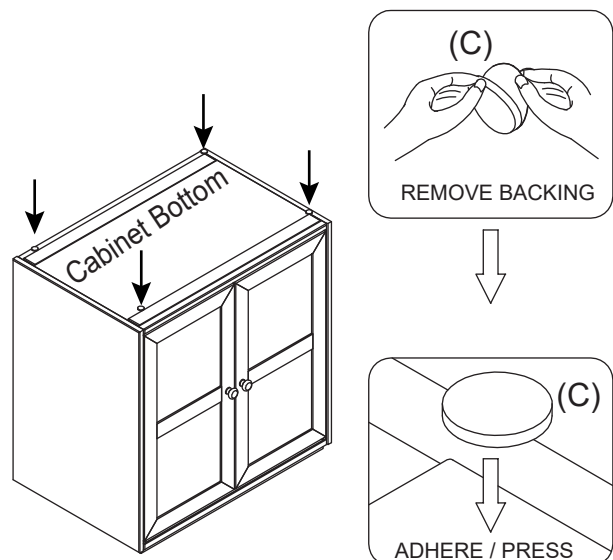

Cleaning and Care


Periodically dust with a soft, dry cloth.
Protect surfaces to prevent damage.
Do not use alcohol based cleaners or polishers.



WARNING: To prevent a dangerous tip-over accident, multiple stacked cabinets must be secured together using Connector Plates. If stacking 3* OR MORE cabinets, entire unit must be bracketed together and **ANCHORED TO A WALL STUD**.

*NOTE: When STACKING, one MV240 Abbeville Double Door Cabinet counts as TWO cabinets.

4

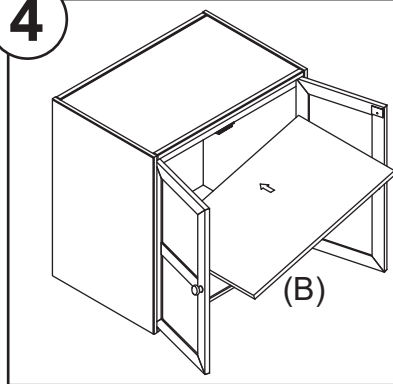


(A)



Insert Shelf Supports (A) into pre-drilled holes along inside edge of Cabinet. Set Shelf (B) level upon Supports.

5

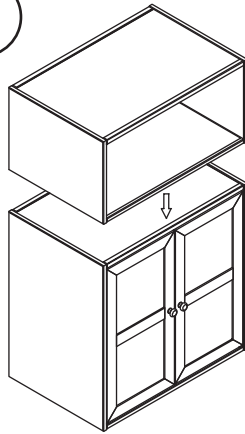

IMPORTANT

Stack to 6 Cabinets High **MAX**
*2 Door (MV240) counts as 2 Cabinets

OPTIONAL: Abbeville Cabinets are designed to be personally configured by stacking up to 6 units. **NOTE: When STACKING, MV240 counts as TWO cabinets.** (Each Sold Separately)

Two Connector Brackets and Two Screws are pre-installed on the back of each Cabinet.


Cabinets must be connected together using connector brackets to ensure stability and prevent a potentially dangerous tip-over accident.

If stacking cabinets, proceed to Step 6.


6

ATTACH CABINETS:


Remove one screw then rotate bracket to cover other cabinet. Replace and tighten screw.

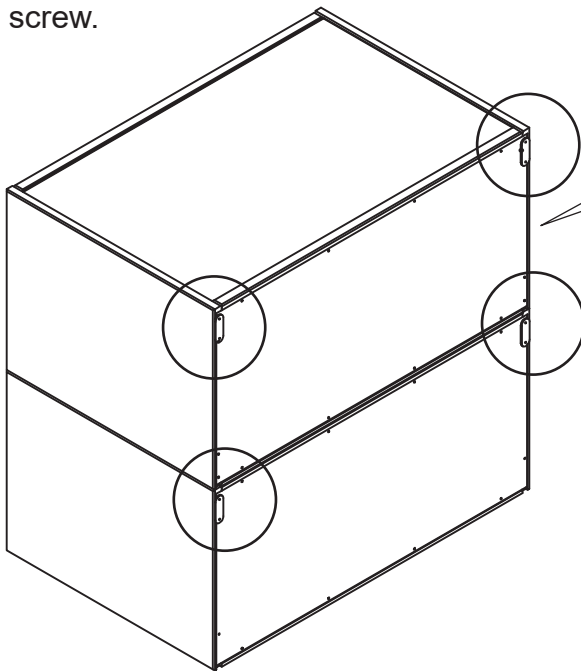


REMOVE SCREW

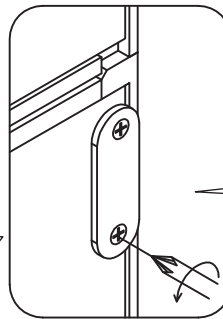

ROTATE BRACKET

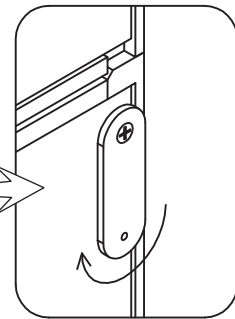

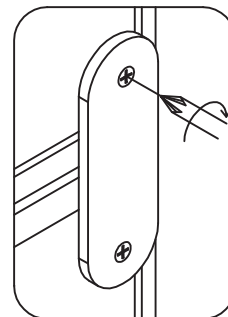



REPLACE SCREW



Customer Service: 800-367-2810
Online: www.ballarddesigns.com

WALL ANCHORING HARDWARE (ANTI-TIP)

Ltr.	Qty.	Hardware Included	
A	2		Large Screw
B	2		Small Screw
C	4		Bracket
D	2		Retention Belt

SAFETY NOTICE

Abbeville Cabinets **MUST** be bracketed together.
IF STACKING 3 OR MORE CABINETS THE ENTIRE STRUCTURE
MUST BE ANCHORED TO A WALL STUD!



WARNING Tip-Over Hazard

Serious or fatal crushing injuries can occur from a furniture tip-over.
 Prevent tipping accidents. Anchor your furniture.

Installation:

1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screw (B).
3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screw (A) 2 inches below Bracket attached to back of unit.
4. Move unit into place, align Brackets then connect both using Retention Belt (D).
5. Confirm Belt is securely laced and locked.

