





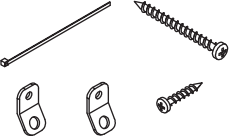
PRODUCT NAME: Paulette Cabinet

ITEM NUMBER: SK013

DIMENSIONS OF ITEM ASSEMBLED: 35 3/4"H X 30"W X 18"D

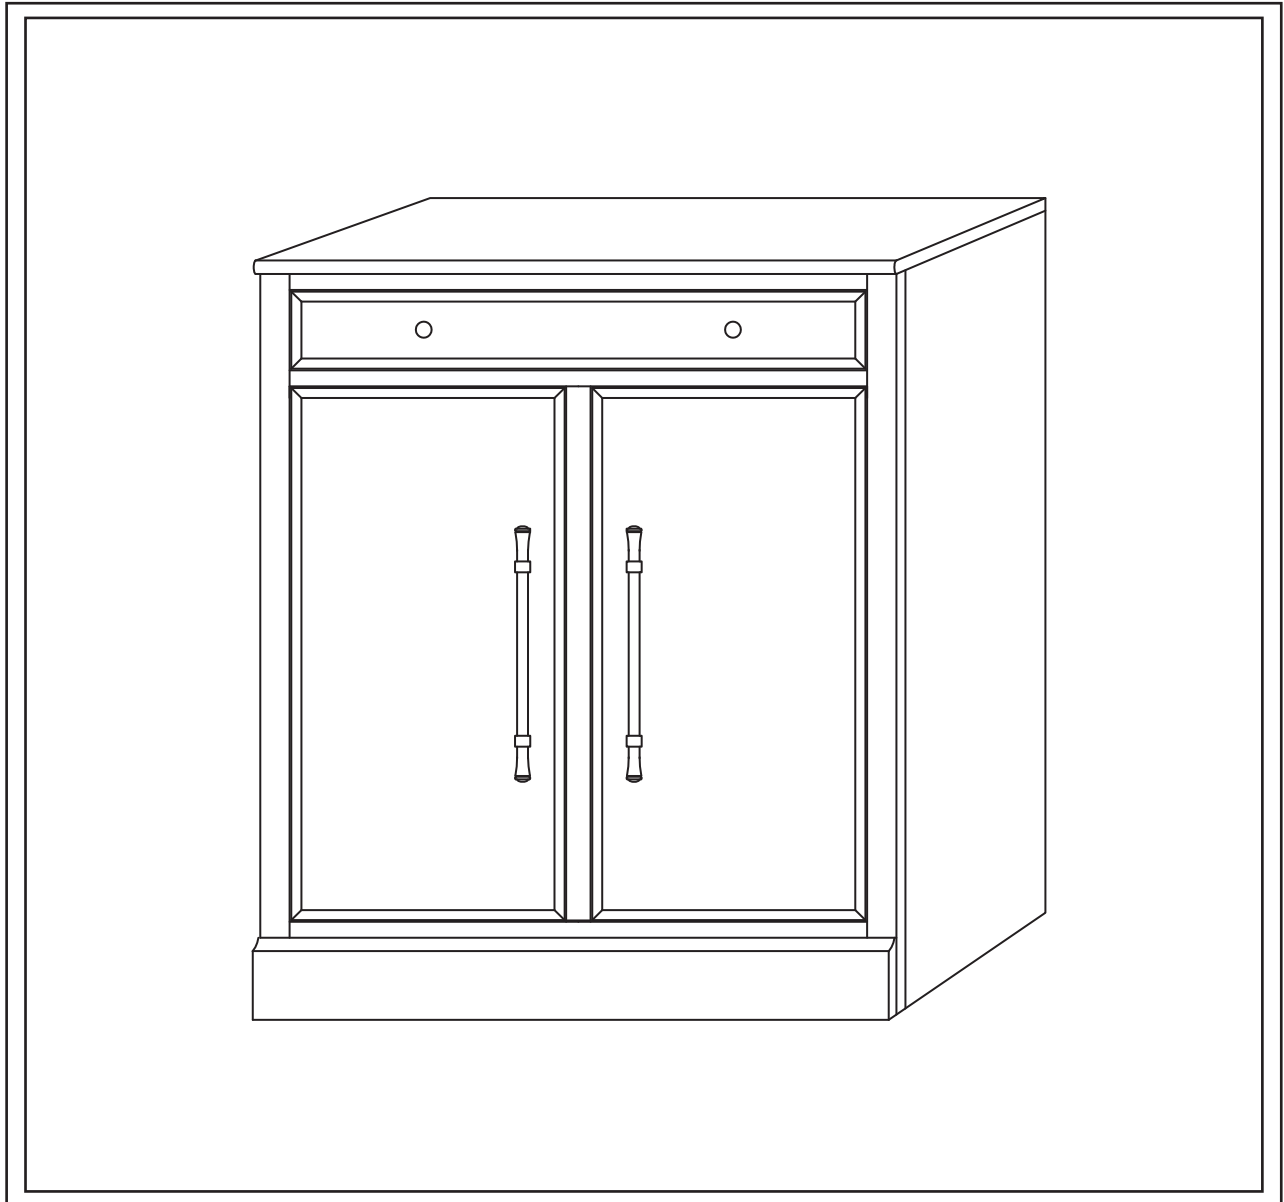

 Assemble in location for intended use.


Ltr.	Qty.	Hardware Included	
A	8		Shelf Supports
B	4		Wood Plugs
C	2		Wall Anchoring (Anti-tip) Kits See page 4

REQUIRED TOOLS:

- Phillips Screwdriver
- Two person assembly suggested.

Remove all parts, hardware and protective packaging from carton and carefully arrange on a clean, level, padded surface.

NOTE: To avoid accidentally discarding small parts or hardware, retain all carton contents until assembly and installation are complete.

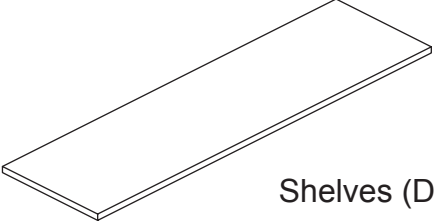Ltr.	Qty.	Components
D	2	 Shelves (D)


WARNING

Tip-Over Hazard

Prevent tipping accidents. Anchor your furniture.


ANCHORING HARDWARE INCLUDED

STEP 1: Determine location for each Shelf (D), insert Shelf Supports (A) into pre-drilled holes then carefully place Shelf upon Supports.



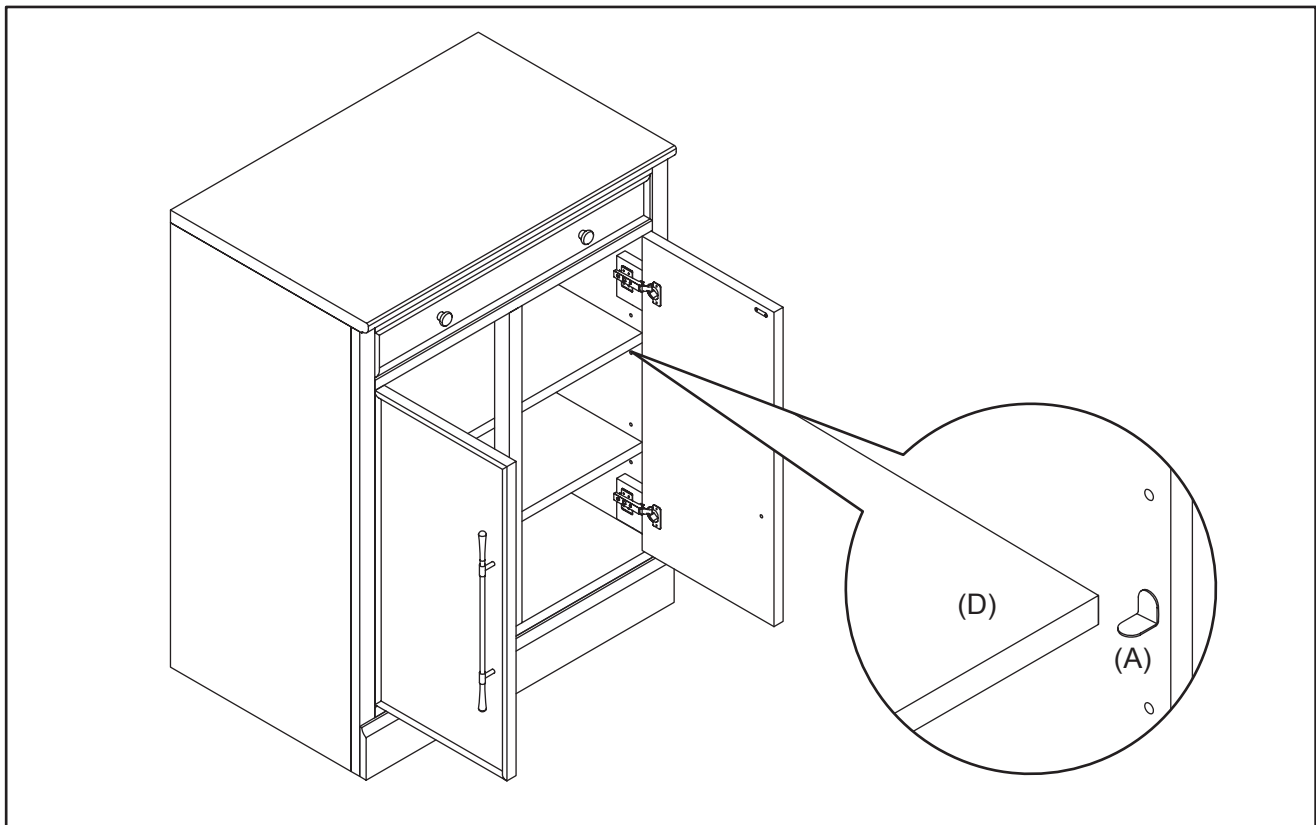



 Assemble in location for intended use.

STEP 2: Cabinet is equipped with Rotary Levelers under each corner. If Doors/Drawer are misaligned or Cabinet is uneven, open doors and insert a Flathead Screwdriver into access hole and turn Levelers clockwise/counterclockwise to adjust. Cover access holes with Wood Plugs (B).

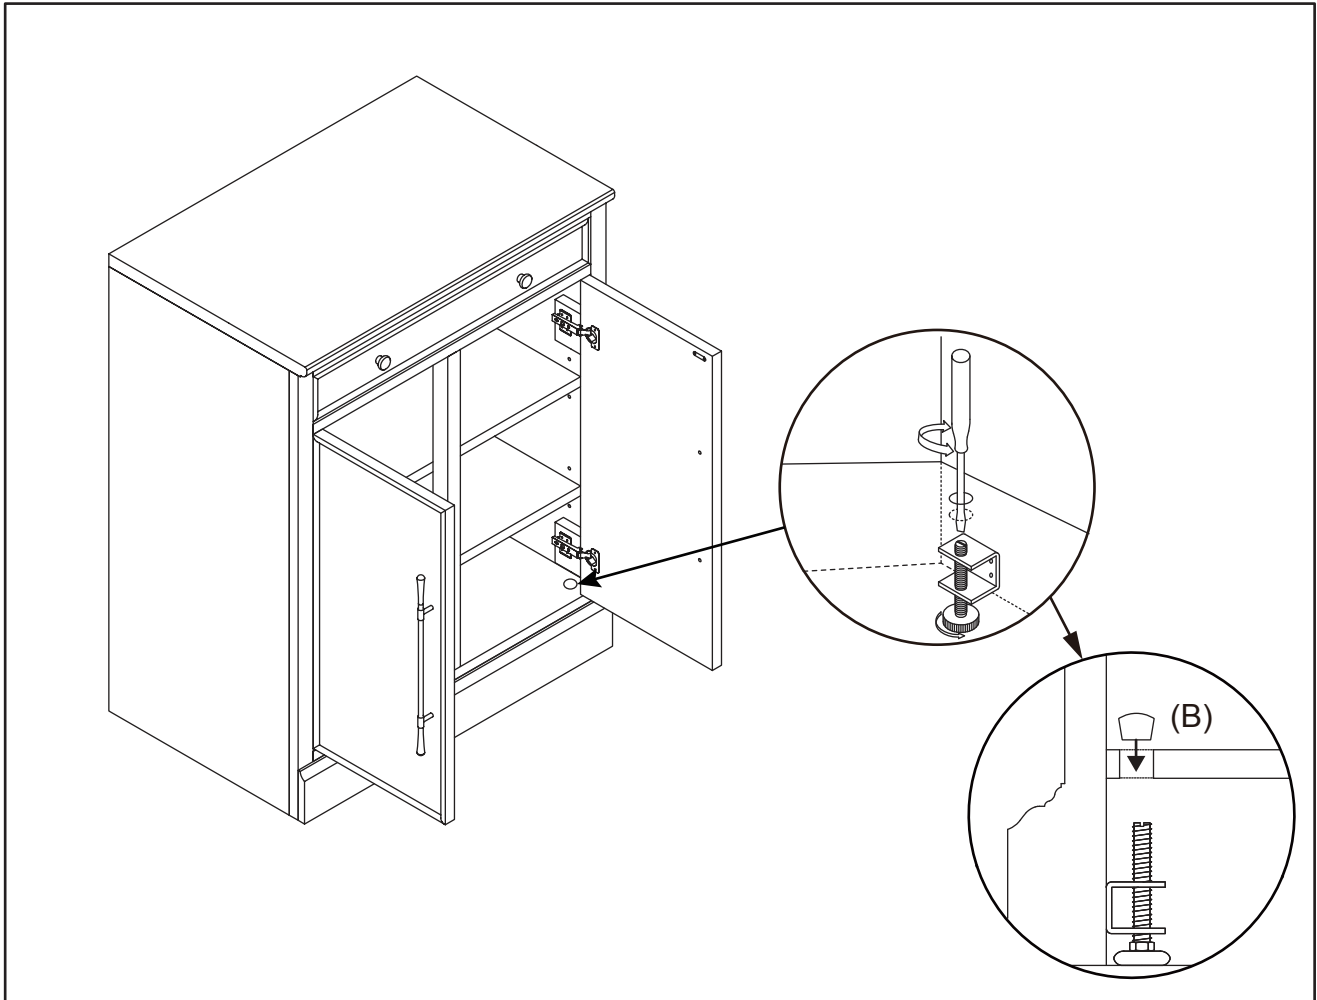

WALL ANCHORING HARDWARE (ANTI-TIP)

Ltr.	Qty.	Hardware Included	
A	2		Large Screw
B	2		Small Screw
C	4		Bracket
D	2		Retention Belt




WARNING

Tip-Over Hazard

Serious or fatal crushing injuries can occur from a furniture tip-over. Prevent tipping accidents. Anchor your furniture.

Installation:

- 1. Place furniture against wall at desired location then locate and mark a Wall Stud behind unit.
- 2. Corresponding to Stud location, attach one Bracket (C) to back of unit using Small Screw (B).
- 3. To keep hardware out of view after installation, attach remaining Bracket (C) **INTO WALL STUD** with Large Screw (A) 2 inches below Bracket attached to back of unit.
- 4. Move unit into place, align Brackets then connect both using Retention Belt (D).
- 5. Confirm Belt is securely laced and locked.

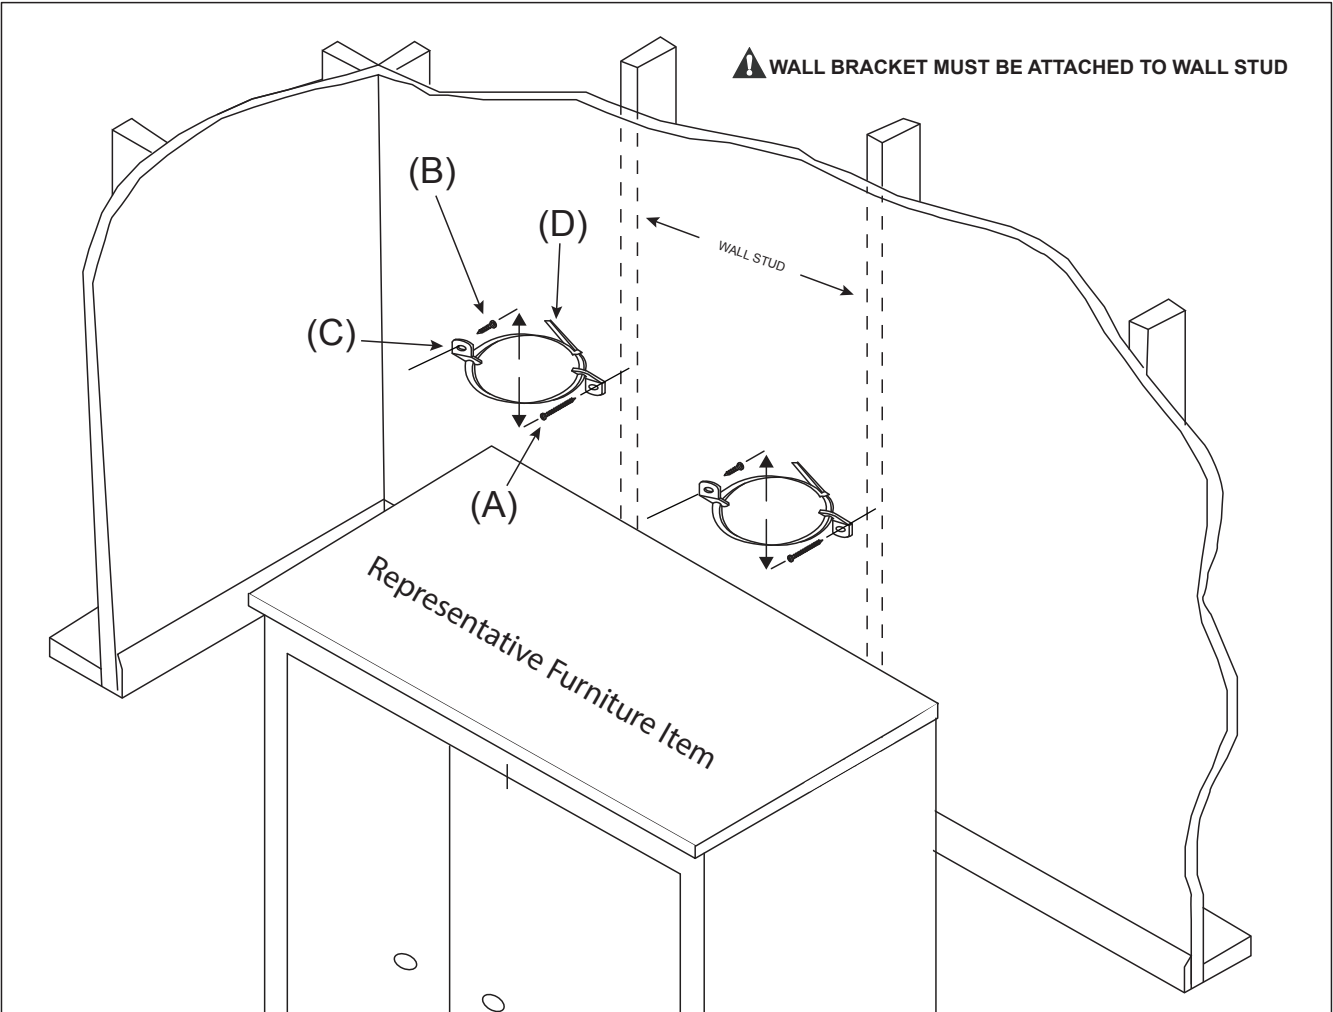

Cleaning & Care:

DO NOT use alcohol based products or spray polisher as they can damage the finish. Dust with soft cloth.