


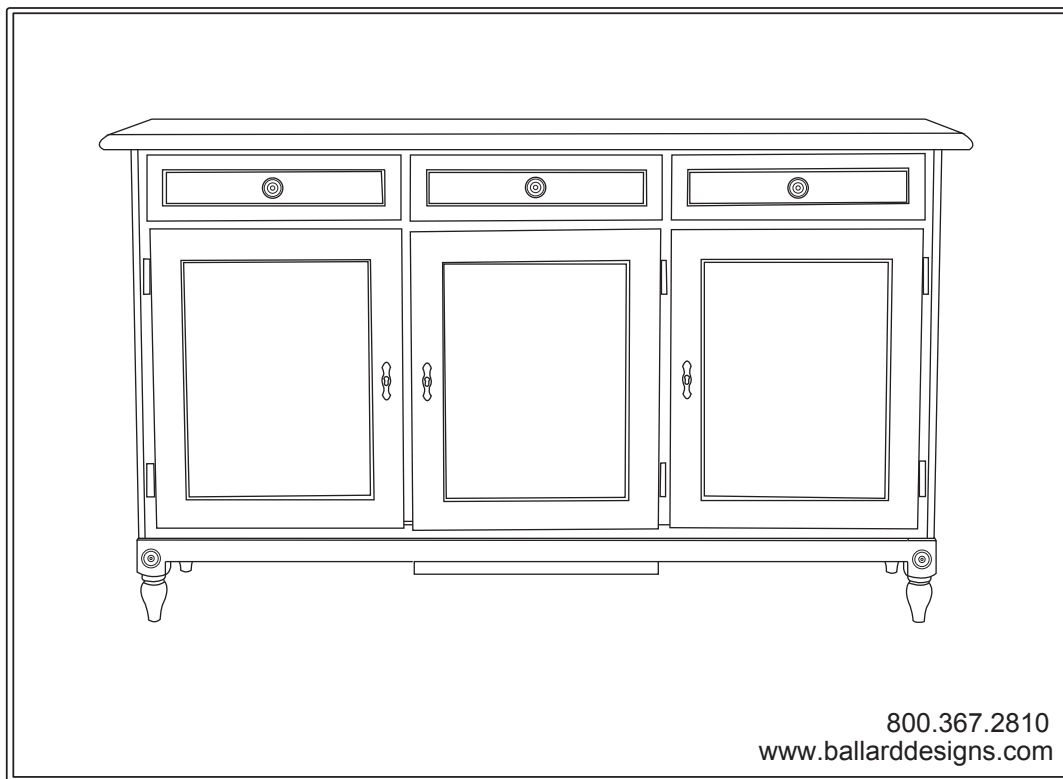

PRODUCT NAME:Antoinette Sideboard  
ITEM NUMBER: TC354  
DIMENSIONS OF ITEM ASSEMBLED:  
37"H x 63"W x 17"D

For Assembly Purposes:





- Requires 2 people.
- Be careful of legs.
- Requires a screwdriver.



800.367.2810  
www.ballarddesigns.com


Check to ensure that you have the following:

Ltr.	Qty.	Hardware Included
A	2	Anti Tip Kits

Ltr.	Qty.	Part List
B	3	 Keys
C	4	 Legs
D	1	 Right Shelf
E	1	 Left Shelf


## STEP 1: Leg Assembly

Lay on back to attach all 4 legs.  
When setting the Sideboard upright,  
DO NOT put pressure on the legs.

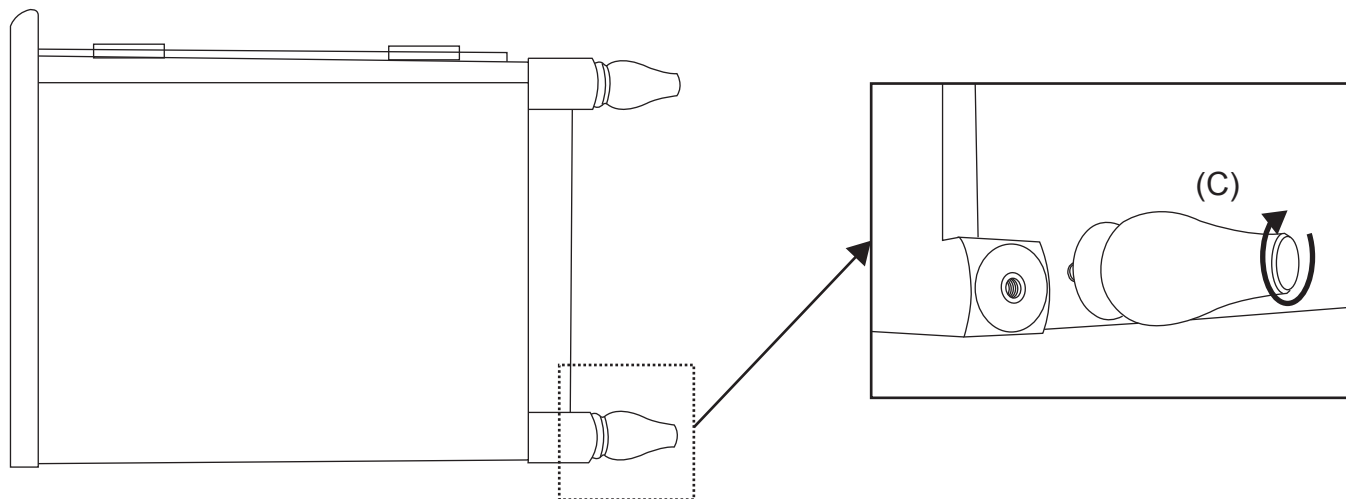


## STEP 2: Shelf Assembly


The 2 shelves are removable but not adjustable.  
Set Shelves (D & E) on the fixed side supports.

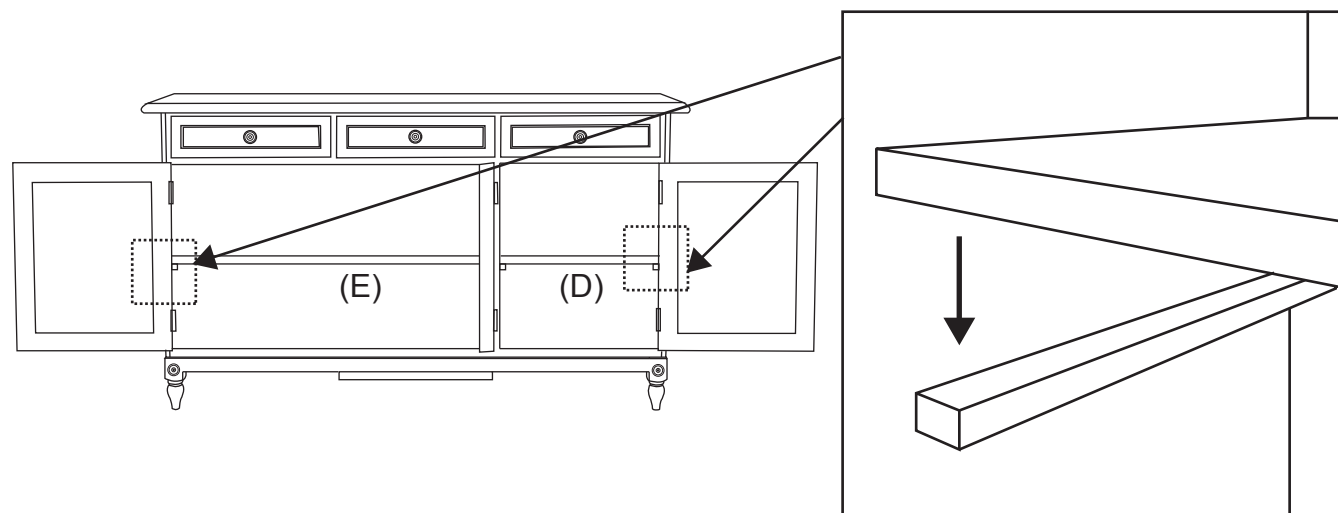

### STEP 3: Anti Tip Installation

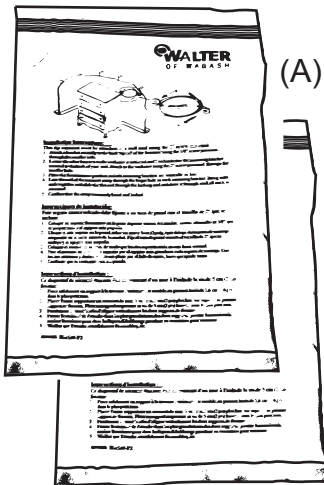

Install Anti Tip Here

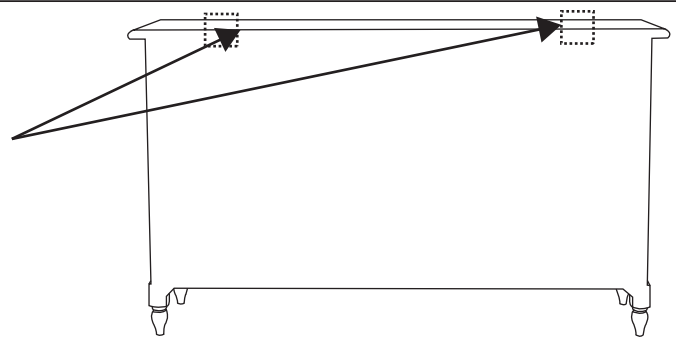

Check to Make Sure Bag Contains All Necessary Parts.

1. Attach bracket to back of furniture with 5/8" screw through smaller bracket hole.
2. Screw in other bracket, with 2" screw through smaller hole, over a stud and 2" below the bracket attached to the furniture.
3. Position furniture so brackets vertically align.
4. Lace restraint through larger bracket holes and lock into place with no available slack.
5. Confirm strap is securely laced and locked.

### Cleaning & Care:

DO NOT use alcohol based products or spray polisher as they can damage the finish.  
Dust with soft cloth. One to two times monthly apply beeswax polish as needed.  
Finish can be affected by heat or extended contact with oils or wine.